

GEMR

Gigabit Ethernet Module

Receptacle

English
Quick Start Guide R-06

Applicable to Product Version
ITI-GEMR-SSWD-D



TABLE OF CONTENTS

GETTING STARTED	4
CONTACT US	4
PRODUCT SPECIFICATIONS.....	4
KIT CONTENTS	4
SETTING UP THE GEMR	5
FRONT PANEL	5
REAR PANEL	6
USING THE GEMR.....	7
CONNECTING THE CHASSIS	7
INSERTING AN EDTC	7
IP RESET PROCEDURE	8

Getting Started

Contact Us

Irvin Technologies Inc.

<http://www.itiengineering.com>

Product Specifications


Spec	
Size	11" L x 7" W x 3.28" H (280 mm x 178 mm x 84 mm)
Chassis Weight	4.6 lbs. (2.09 kg)
Operating Temp	+5 to +40 C (+51 to +104 F)
Storage Temp	-40 to +70 C (-40 to +158 F)
Power	100/240 VAC 50/60Hz Max Current 1.5A Fuse 250V/T2A

Kit Contents

- GEMR Chassis
- IP Reset Dongle
- Power Supply Cable
- Quick Start Guide

Setting up the GEMR

Front Panel

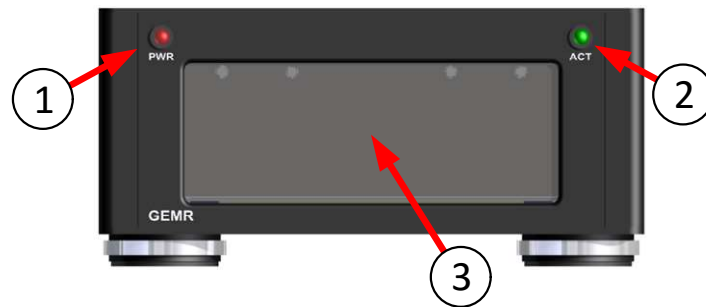

1) Power indicator (PWR)

Indicates chassis main power is turned on such that the internal AC-DC power supply is energized. Note that this does not mean the receptacle cartridge interface is energized.


2) Active indicator (ACT)

Indicates the receptacle cartridge interface is energized. This indicator is activated when an EDTC is installed into the receptacle and the handle is moved to the closed (up) position.

3) EDTC Slot

Slot to insert the EDTC device.

Rear Panel

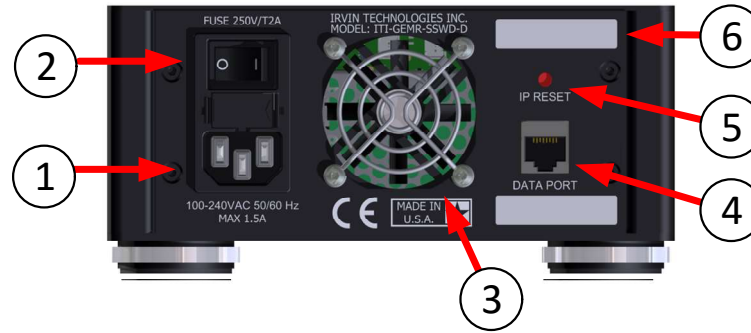

- 1) Power Switch**
Controls chassis main power. When in “on” position, the internal AC-DC power supply is energized and the receptacle is ready to support an EDTC.
- 2) Power Connector**
Industry standard IEC power cord interface. Connect the power cord to the power connector.
- 3) Exhaust fan**
The exhaust fan must not be obstructed or overheating may result.
- 4) Data Port**
Port used to connect RJ45 Ethernet cable (cross-over cable not required).
NOTE: It is recommended that you use a shielded CAT6 patch cord to connect the GEMR to the network infrastructure.
- 5) IP Reset**
Button used during the IP Reset procedure.
- 6) Product Labels**
One or more product labels will be affixed to the rear panel. Do not remove the product label(s).


Using the GEMR

Connecting the Chassis

Follow these instructions to connect the chassis:

1. Plug the power cable into the chassis
2. Connect an Ethernet cable to the data port on the back of the chassis.
3. Power on the chassis. The receptacle is immediately ready to accept an EDTC for loading and/or management.

Inserting an EDTC

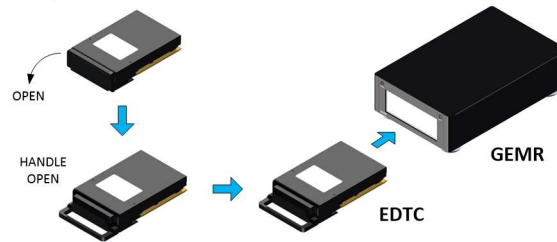


Follow these instructions to insert an EDTC:

1. Open (down) the handle on the EDTC
2. Hold the EDTC with the top facing up
3. Insert the EDTC into the slot and press firmly to ensure it is fully seated on the mating connector.
4. Close the handle on the EDTC. If the handle does not close, the EDTC is not in all the way
5. Once the handle is closed the Active Indicator will turn on and the EDTC will initialize for access. The Active light will remain on while the EDTC is inserted with the handle in the closed position.

IP Reset Procedure

In the event that the IP address on the EDTC has been changed (default is 192.168.0.2) it may be required to perform a reset procedure. This procedure requires the use of the IP Reset Dongle.

1. Ensure the GEMR main power is on (PWR lamp on)
2. Insert the EDTC and leave the handle in the open (down) position
3. Open front panel on EDTC
4. Attach IP Reset Dongle to the front of the EDTC onto the ground support connector.
5. Press IP Reset button on back of the GEMR chassis
6. The Active light will turn on while processing, wait for light to turn off (approximately 20 secs)
7. Now the default IP has been reset (192.168.0.2)
8. Remove the IP Reset Dongle
9. Close the front panel and handle on the EDTC to resume normal functionality

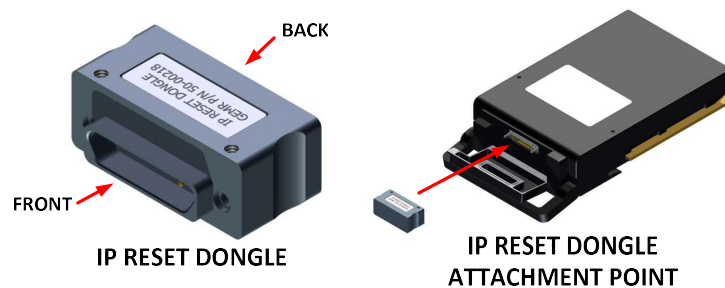

The IP Reset Dongle is a small plastic device that has a connector on the front that mates with the EDTC ground support connector. The dongle provides the connection necessary to reset the IP address when the IP Reset Button is used to apply power to the EDTC.

Notes

Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Power Cords and Outlets:

These devices should be installed in close proximity to socket outlets that are easily accessible.

These devices support universal AC input: 100/240VAC @ 50/60Hz. The product is sold in a base configuration with a North American AC power cord with the following characteristics: device side has a 3-prong "PC" power type C13 beveled connector; the wall outlet end has a US type 110-volt outlet connector.

For specific country power cords, contact the manufacturer or purchase the needed power cord directly from an international power cord provider.